
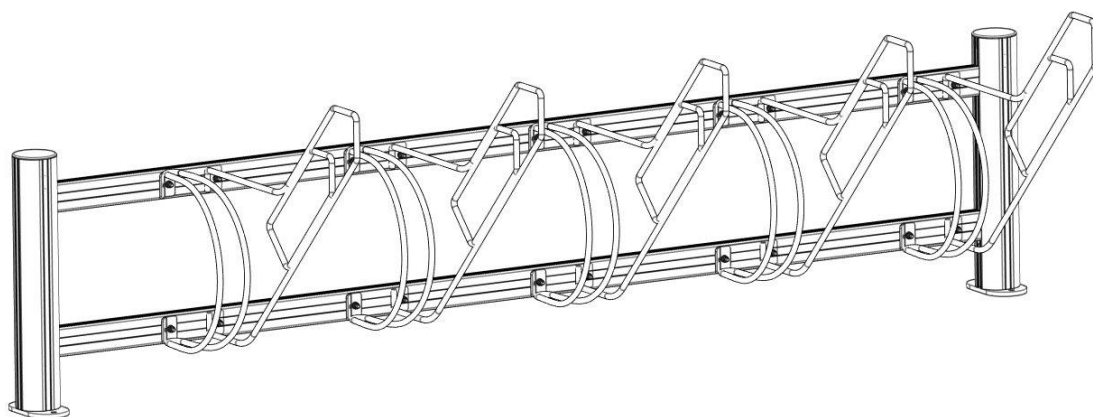


BIKE



Monteringsanvisning

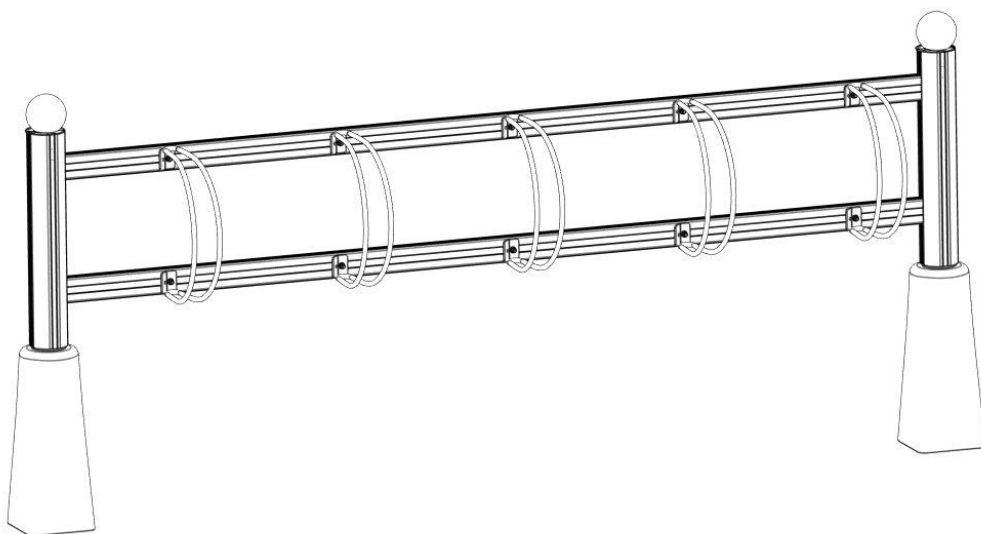

WELAND ALUMINIUM AB

Björnstorpsvägen 2, SE-342 30 ALVESTA


Tfn: +46(0)472-445 00

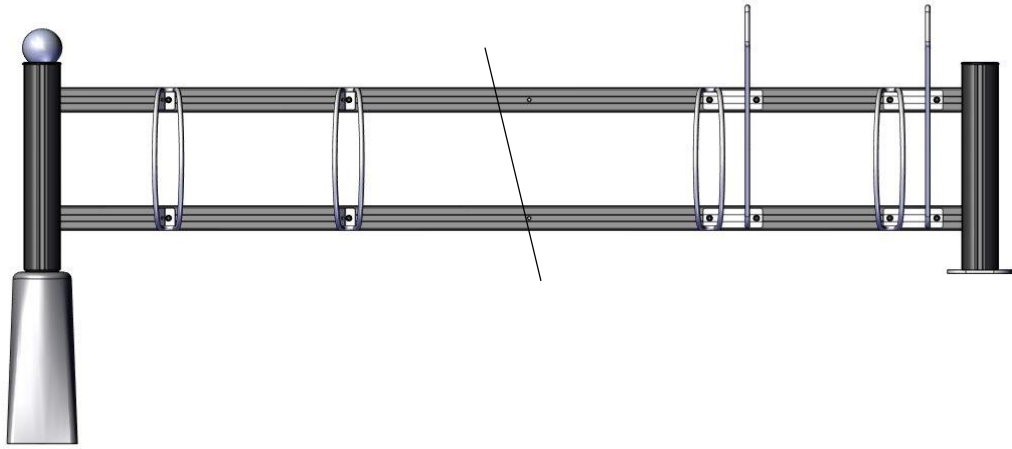

M8



M8x16




Ø60



M8x12



Ø60 L-800



4,8x40



M10x60



Ø8,4




M8x60






M8x45/50




M8




M10x83

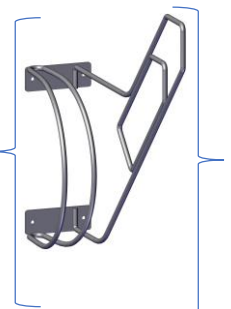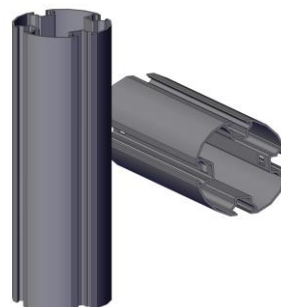


1A

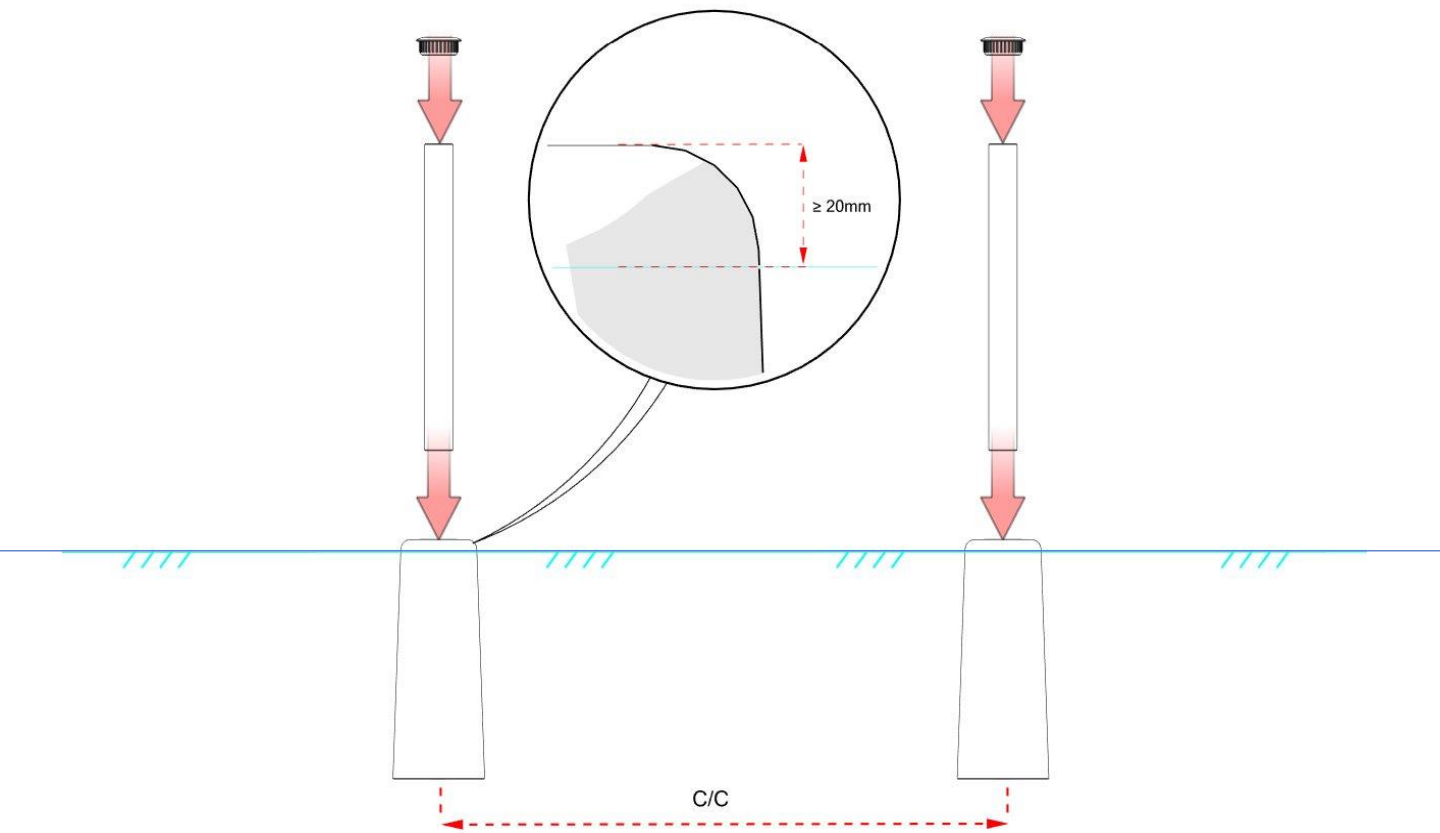


1B

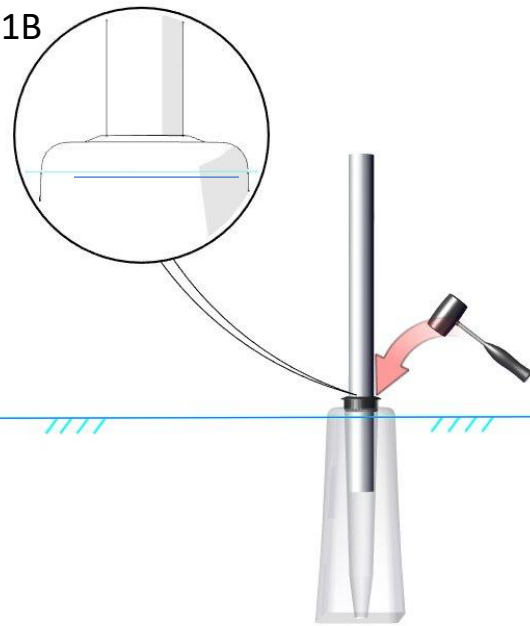


1C

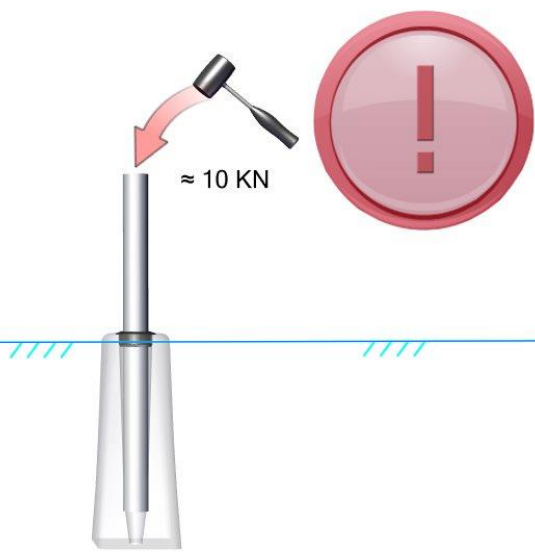


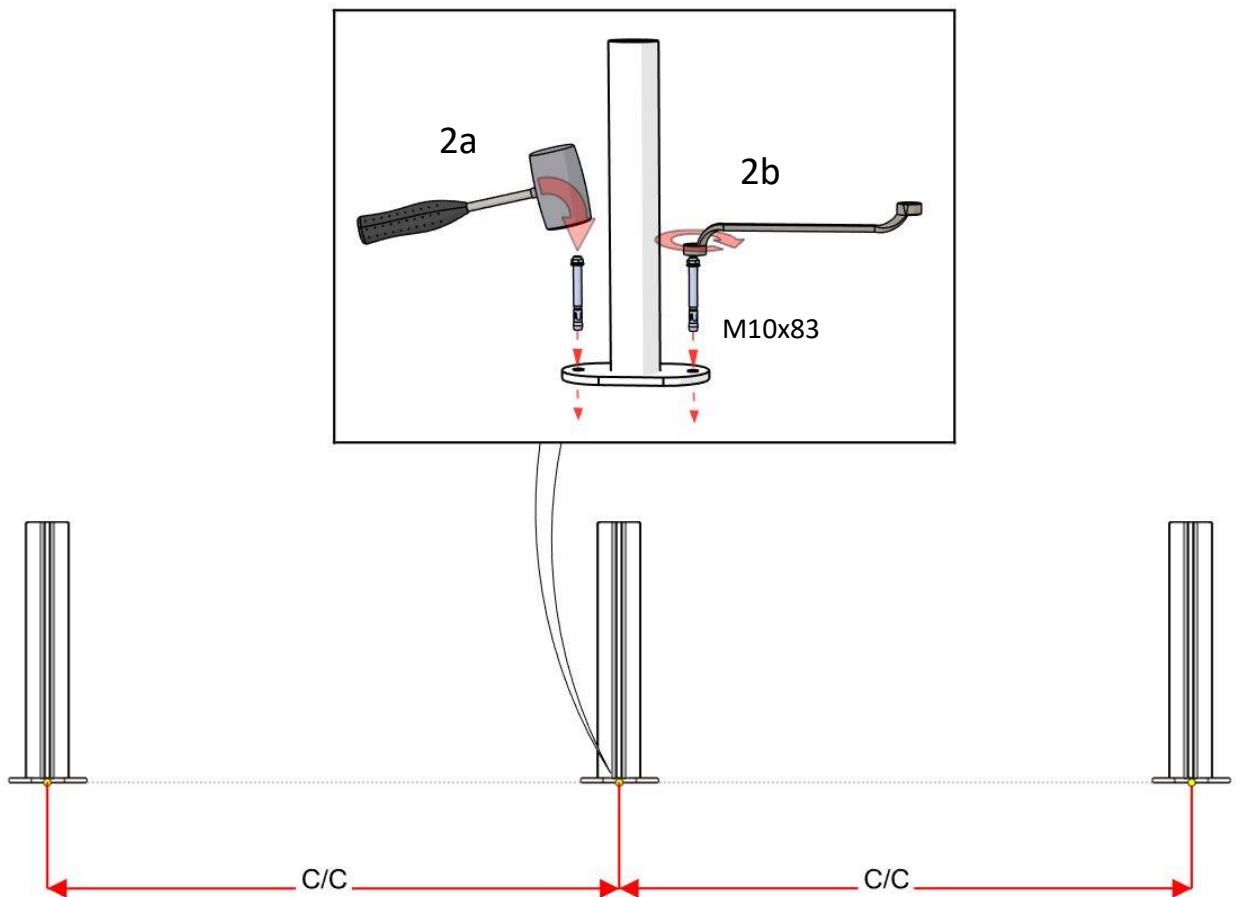


Montage instruktioner Expanderbult HSA M10x83

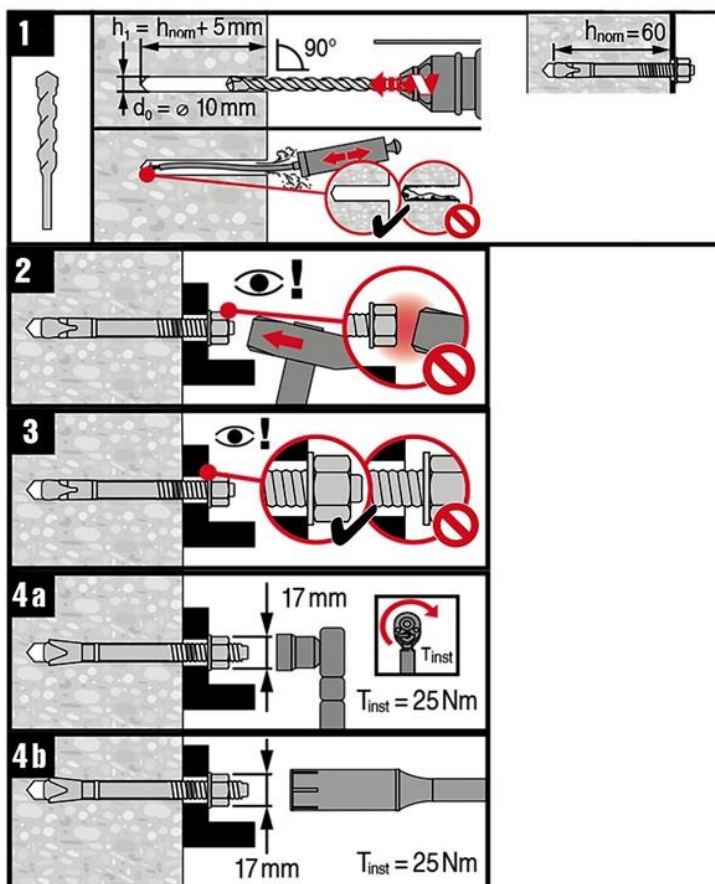




3

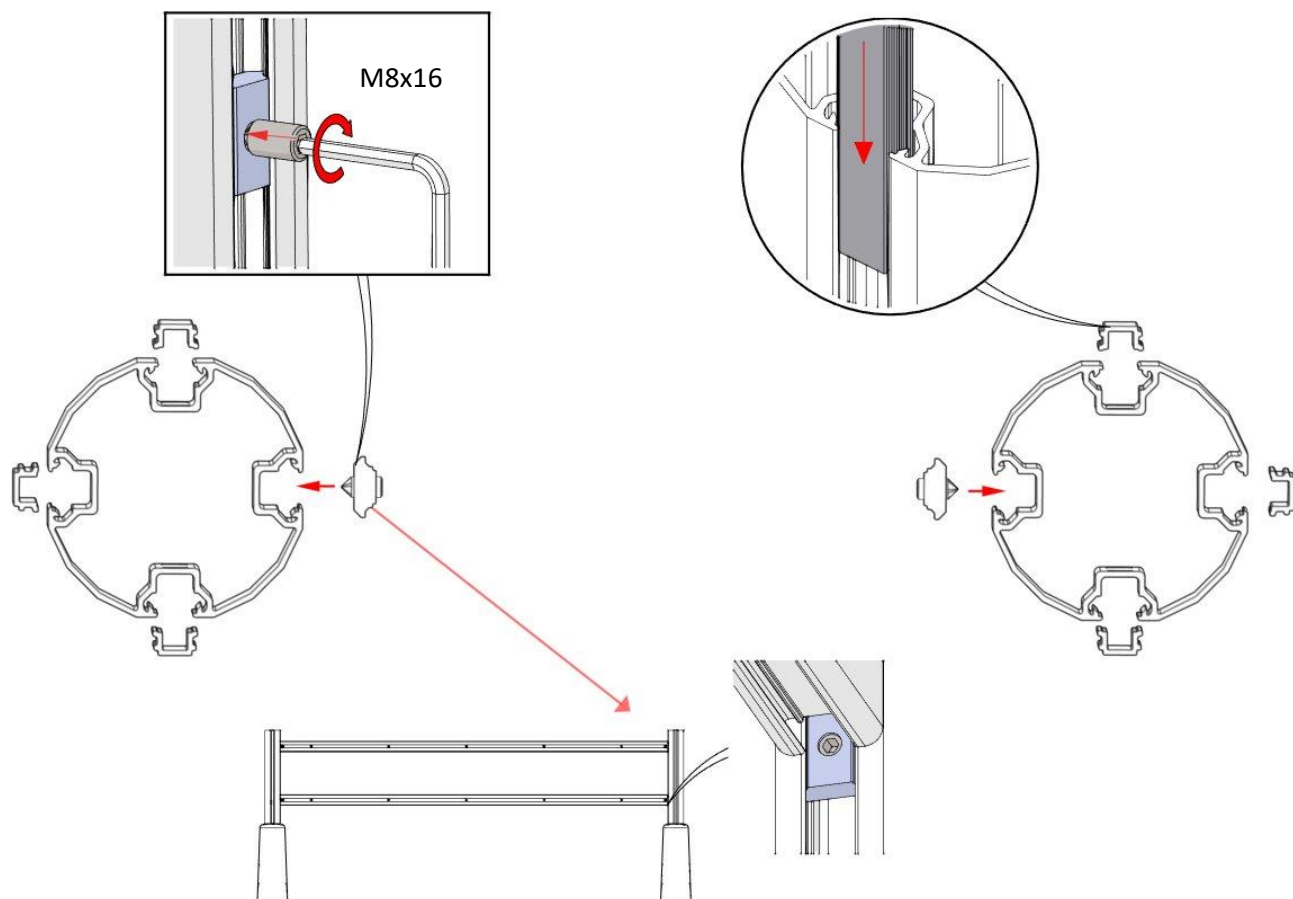






4

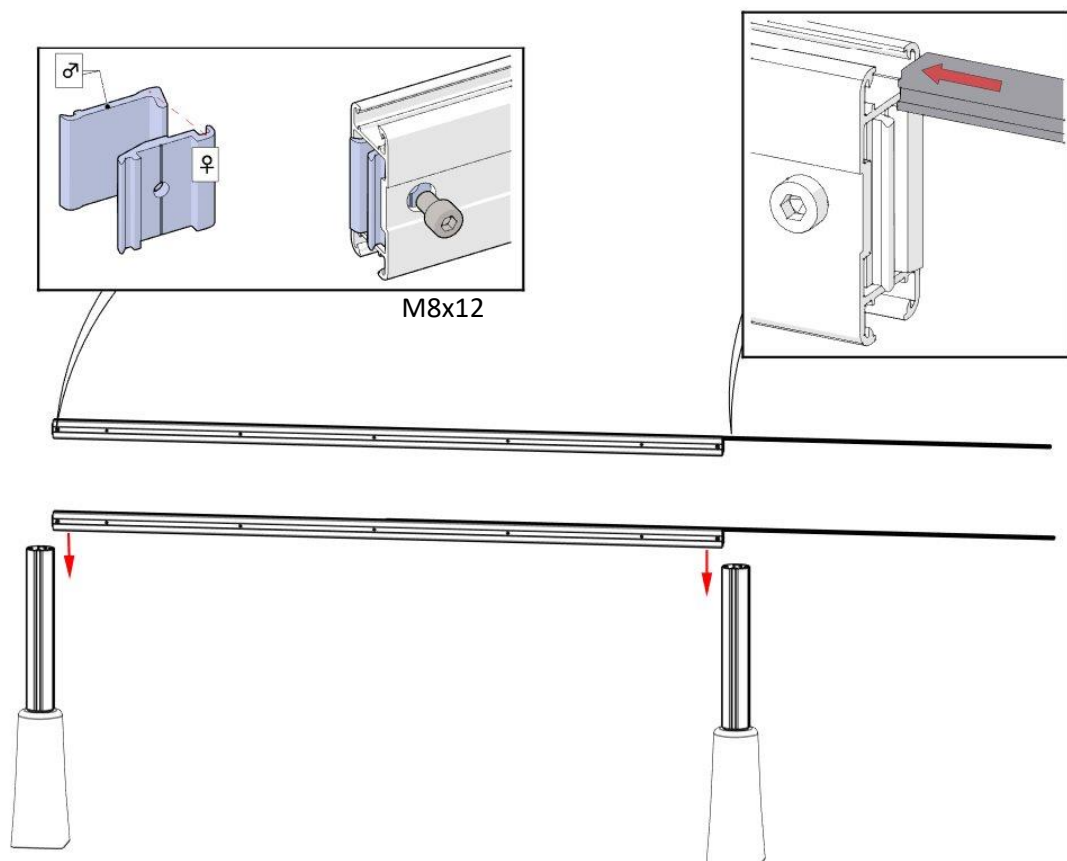


5

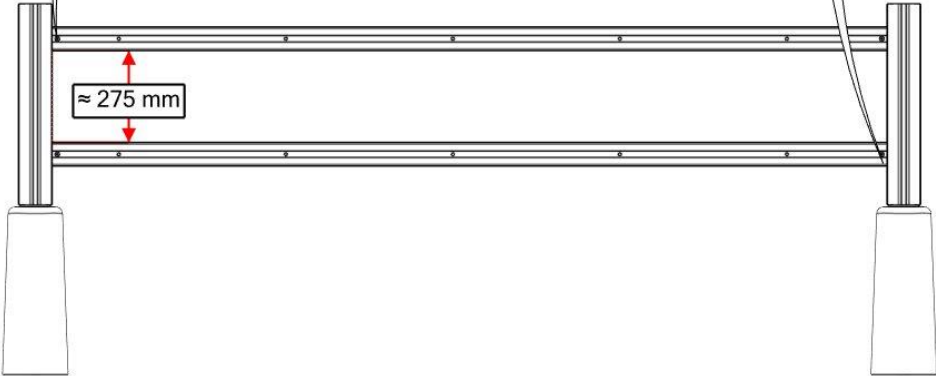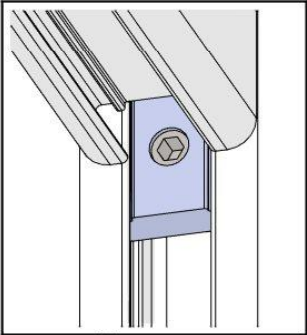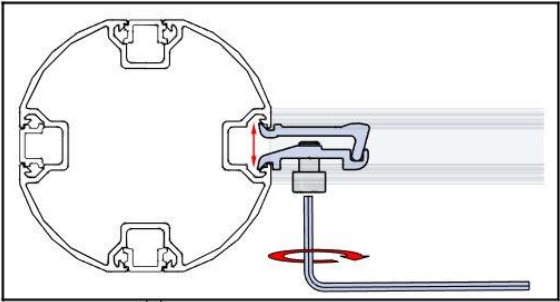

6

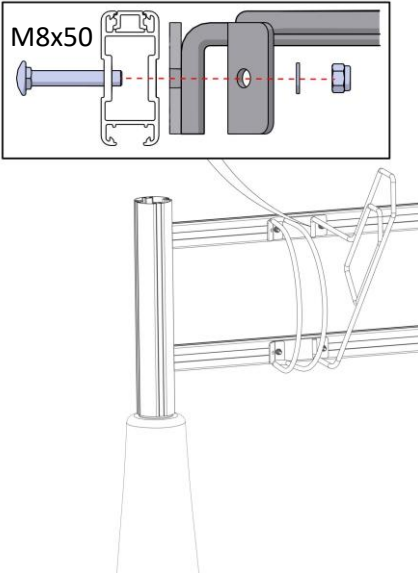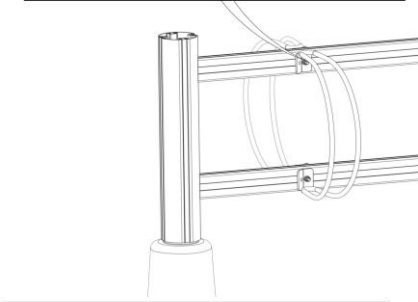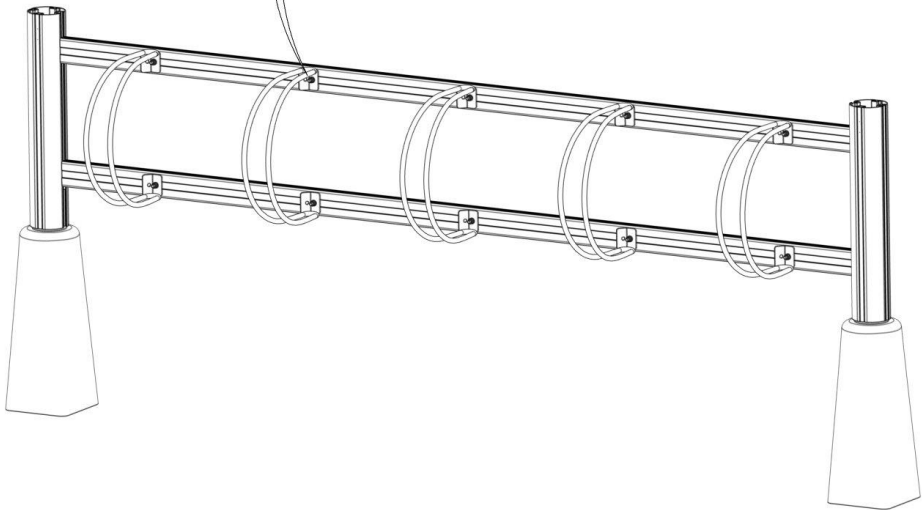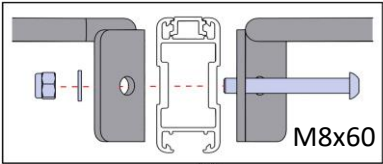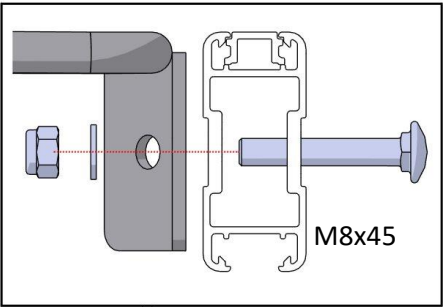

7A

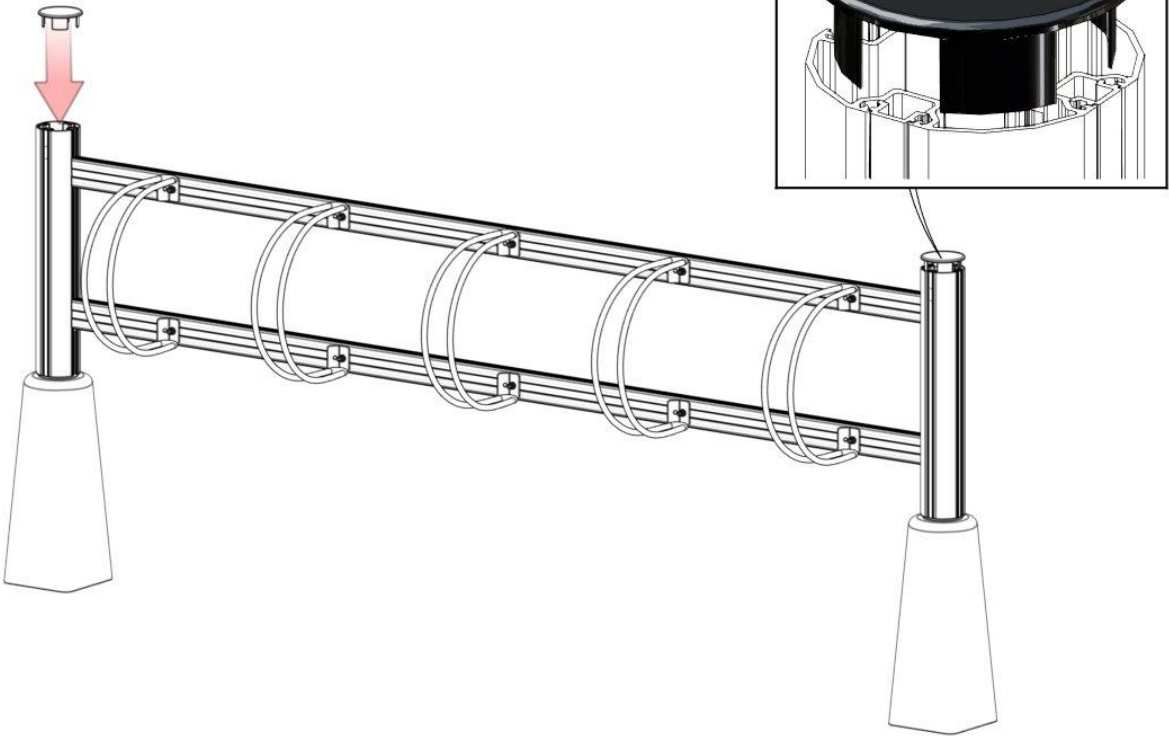

7B

